


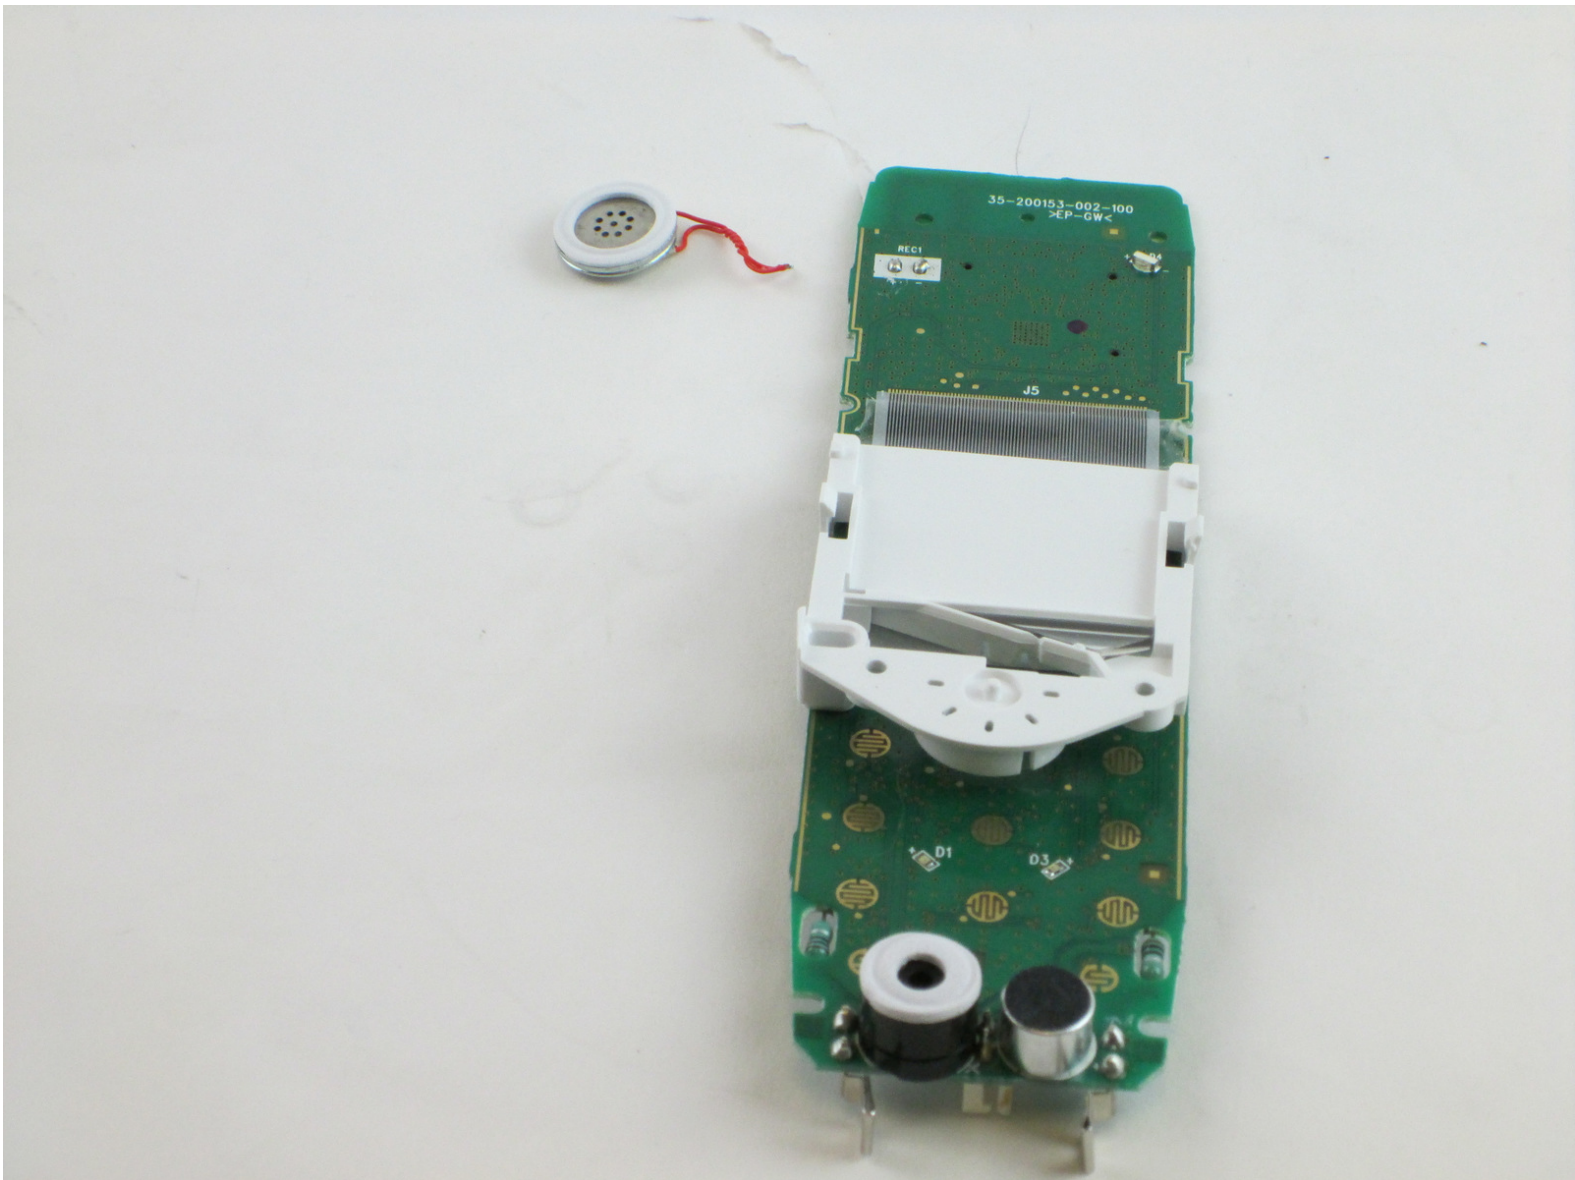

VTech CS6114 Speaker Replacement

A step-by-step guide to replace the speaker of a VTech CS6114 cordless phone handset.

Written By: Sheckeem Daley



INTRODUCTION

The speaker is attached to the motherboard. Thus, after removing the motherboard, the speaker can be replaced.



TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Portable Soldering Iron](#) (1)
-

Step 1 — Battery



- Hold handset with one hand with the keypad facing downward.

Step 2



- Place thumb on the indentation located at the top of the battery cover.
- Press down and gently slide the cover off the back of the handset.
- Set the battery cover aside.

Step 3




- Use thumb and index finger to gently pull the wired connection from the handset.
- Remove the battery.

Step 4 — Handset Motherboard




- Using a screwdriver, remove the two 10.0mm Philips #0 screws at the bottom corners of the rear casing of the handset.

Step 5

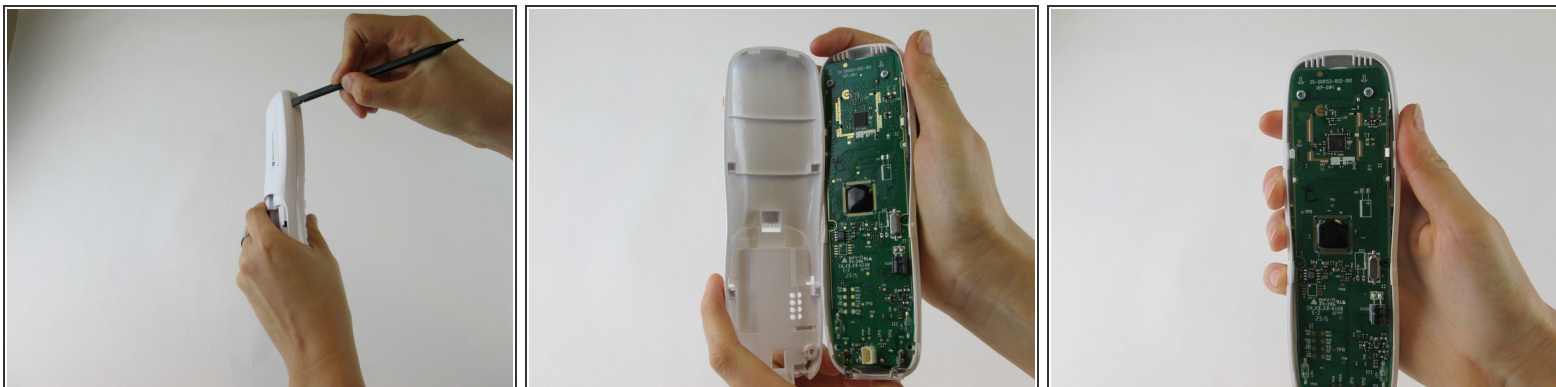


- Separate the rear casing from the front by running the black spudger along the crevice on the outer edge of the phone.

Step 6

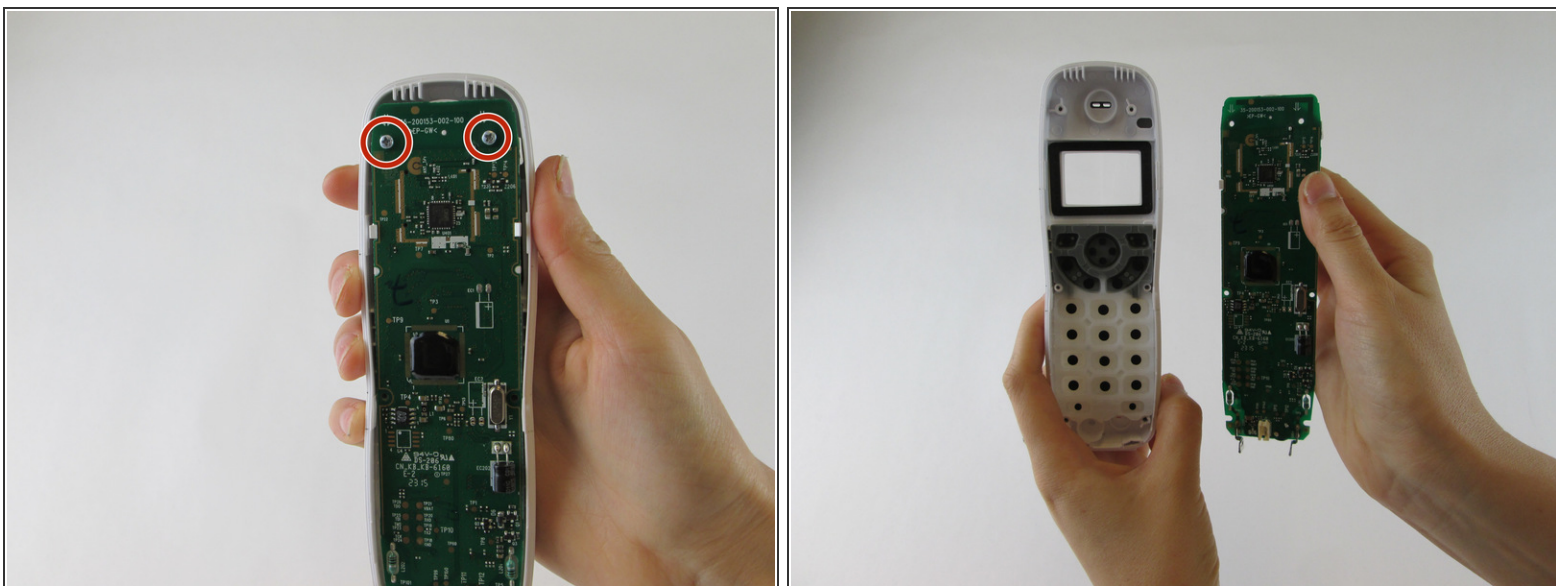


- Using a screwdriver, remove the two 10.0mm Philips #0 round head screws at the top corners of the handset motherboard.
- Remove the handset motherboard.

Step 7 — Speaker

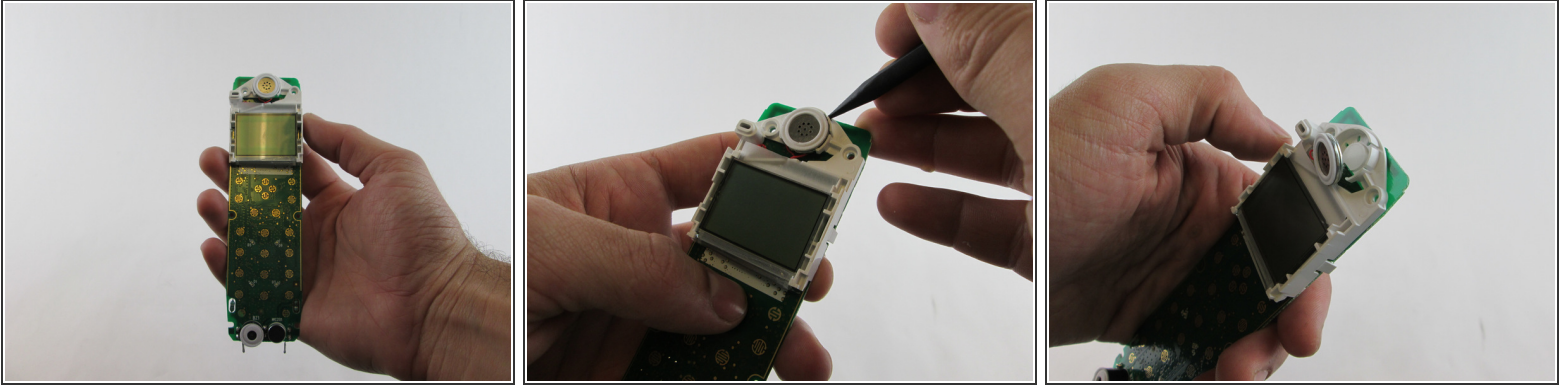



- Hold the motherboard display side up.
- Using the black spudger, pry into the upper right corner of the speakers casing.

Step 8

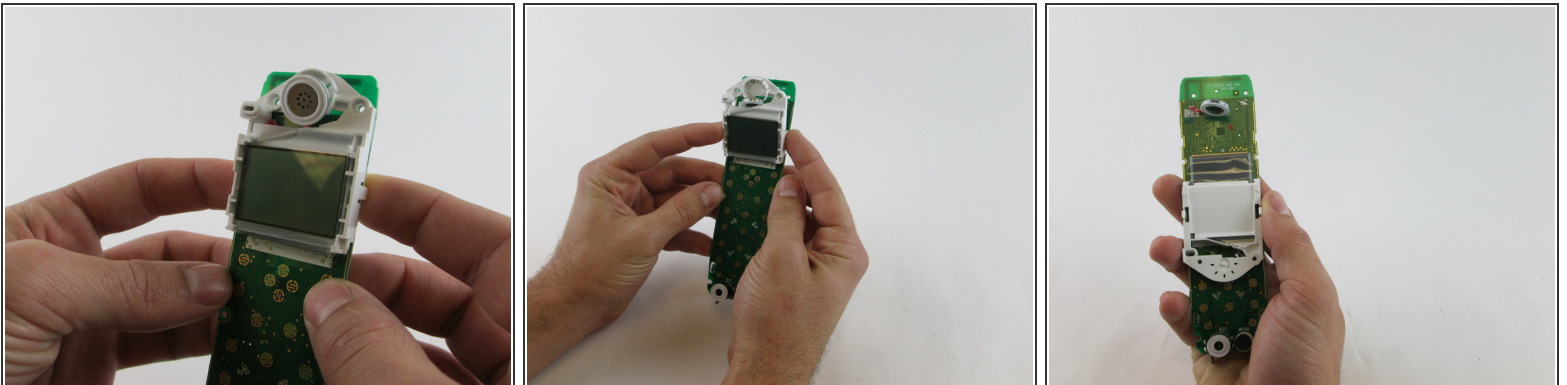

- Using the index fingers, gently push on the white tabs that extrude beyond the motherboard.
- feed the speaker through the slot above the display, where the wires of the speaker run through.

Step 9

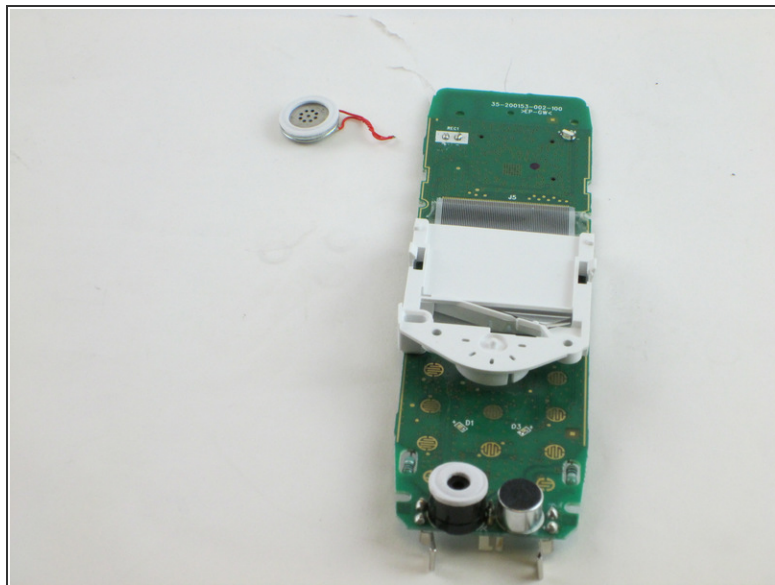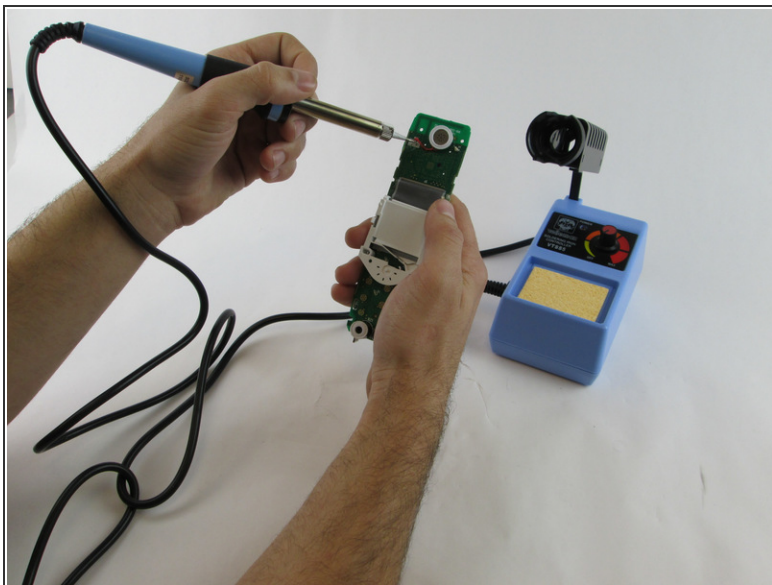

- Use the portable soldering iron to melt the glue which holds the speaker's wires to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 04:18:41 AM.